

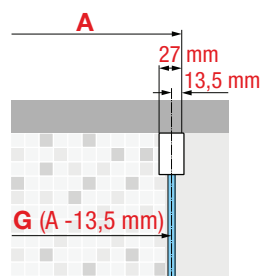


# ROSE ROSSE 2P

SHOWER DOOR, 1 SLIDING DOOR + 1 FIXED PANEL

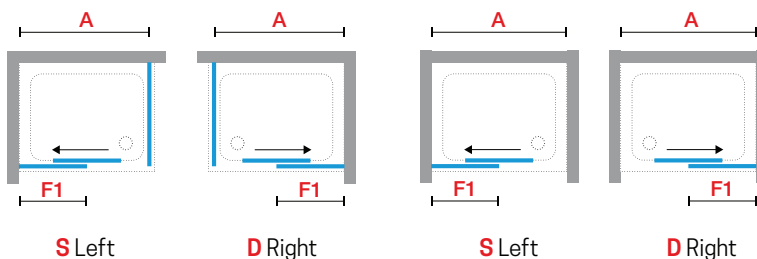

Dimensions				Code	Right	Left	Glass				Profile	
Actual size	Glass centered	Fixed panels	Access		D-	S-	1	4	56	57	B	K
A	G	F1	*				Clear	Satin	Rose 2 print	Rose 2 print	Silver	Chrome
96↔102	94,6↔100,6	44	37,5	<b>ROSE2P96</b>	D-	S-						
114↔120	112,6↔118,6	53	46	<b>ROSE2P114</b>	D-	S-						
116↔122	114,6↔120,6	54	47	<b>ROSE2P116</b>	D-	S-						
121↔127	119,6↔125,6	57	49,5	<b>ROSE2P121</b>	D-	S-						
126↔132	124,6↔130,6	59	52	<b>ROSE2P126</b>	D-	S-						
131↔137	129,6↔135,6	61	54,5	<b>ROSE2P131</b>	D-	S-						
136↔142	134,6↔140,6	64	57	<b>ROSE2P136</b>	D-	S-						
141↔147	139,6↔145,6	66	59,5	<b>ROSE2P141</b>	D-	S-						
146↔152	144,6↔150,6	69	62	<b>ROSE2P146</b>	D-	S-						
151↔157	149,6↔155,6	74	62	<b>ROSE2P151</b>	D-	S-						
156↔162	154,6↔160,6	79	62	<b>ROSE2P156</b>	D-	S-						
161↔167	159,6↔165,6	84	62	<b>ROSE2P161</b>	D-	S-						
166↔172	164,6↔170,6	89	62	<b>ROSE2P166</b>	D-	S-						
171↔177	169,6↔175,6	94	62	<b>ROSE2P171</b>	D-	S-						
176↔182	174,6↔180,6	99	62	<b>ROSE2P176</b>	D-	S-						
181↔187	179,6↔185,6	104	62	<b>ROSE2P181</b>	D-	S-						
186↔192	184,6↔190,6	109	62	<b>ROSE2P186</b>	D-	S-						
191↔197	189,6↔195,6	114	62	<b>ROSE2P191</b>	D-	S-						
196↔202	194,6↔200,6	119	62	<b>ROSE2P196</b>	D-	S-						

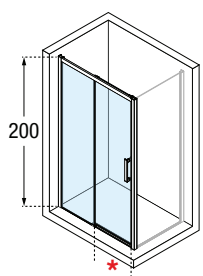

**A** Installation on shower tray  
**G** Installation on floor



Construction of the Code:

Code

+

Left / Right

+

Glass

+

Profile

=

Final product Code



#### GLASS TYPE



Clear  
code 1



Satin  
code 4



Rose 1 Print.  
code 56



Rose 2 Print.  
code 57

#### PROFILE COLOURS



Silver  
code B



Chrome  
code K

## TECHNICAL DATA

### PROFILE COLOURS



Silver  
code B



Chrome  
code K



### GLASS TYPE 6 mm (European Standards UNI EN 14428)



Clear  
code 1



Satin  
code 4

### PRINTING



Rose 1  
code 56




Rose 2  
code 57


### HANDLES



Crystal handle  
Interaxis 256 mm

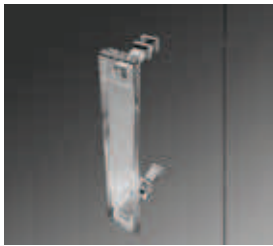

Crystal handle

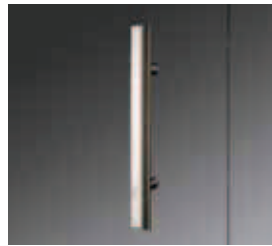

Chromed metal handle



Chromed metal handle



Chromed metal handle

Code	Price
<b>R40MAROS1-K</b>	


Code	Price
<b>R40MACNF1-K</b>	

Code	Price
<b>R40MANEX1-K</b>	

Code	Price
<b>R40MAGIN1-K</b>	


### OPTIONAL

### OVERALL DIMENSIONS FIXING PROFILES

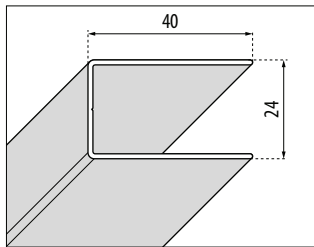


**WALL**  
R - PHB - PH+F - A

Perfis	Code
White	<b>P01BEAST-A</b>
Silver	<b>P01BEAST-B</b>
Chrome	<b>P01BEAST-K</b>

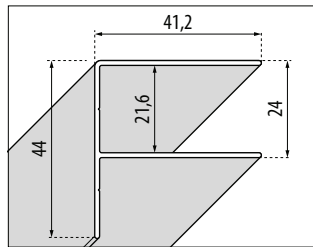


**WALL**  
2A - B - 3P - G - S - 2M - 2P

Perfis	Code
White	<b>P01BEGST-A</b>
Silver	<b>P01BEGST-B</b>
Chrome	<b>P01BEGST-K</b>

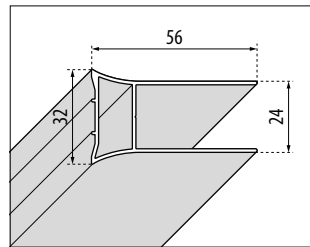

**EXTENSION**  
R - PHB - PH+F - A



Perfis	Code
White	<b>P05ROSST-A</b>
Silver	<b>P05ROSST-B</b>
Chrome	<b>P05ROSST-K</b>

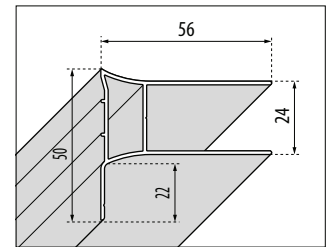


**EXTENSION**  
2A - B - 3P - G - S - 2M - 2P

Perfis	Code
White	<b>P05ROSCST-A</b>
Silver	<b>P05ROSCST-B</b>
Chrome	<b>P05ROSCST-K</b>

### HOW TO TAKE THE MEASUREMENTS

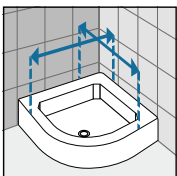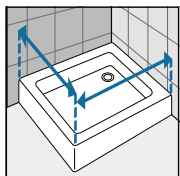

Take the measurements from wall to the external edge of the shower tray. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.

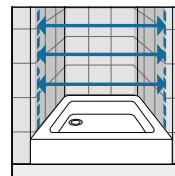

Take the measurements from wall to wall at the bottom, at the top, in the middle and use the smallest. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.