

ROSE ROSSE F

SIDE PANEL



200 cm



6 mm



3 cm



GLASS TYPE



Clear
code 1



Satin
code 4



Rose 1 Print.
code 56



Rose 2 Print.
code 57

PROFILE COLOURS




Silver
code B




Chrome
code K

Dimensions		Code	Glass				Profile	
Actual size	Glass centered		1	4	56	57	B	K
F	G		Clear	Satin	Rose 2 print	Rose 2 print	Silver	Chrome
66↔69	64,6↔67,6	ROSEF66-						
68↔71	66,6↔69,6	ROSEF68-						
71↔74	69,6↔72,6	ROSEF71-						
73↔76	71,6↔74,6	ROSEF73-						
75↔78	73,6↔76,6	ROSEF75-						
78↔81	76,6↔79,6	ROSEF78-						
81↔84	79,6↔82,6	ROSEF81-						
83↔86	81,6↔84,6	ROSEF83-						
85↔88	83,6↔86,6	ROSEF85-						
88↔91	86,6↔89,6	ROSEF88-						
91↔94	89,6↔92,6	ROSEF91-						
93↔96	91,6↔94,6	ROSEF93-						
95↔98	93,6↔96,6	ROSEF95-						
98↔101	96,6↔99,6	ROSEF98-						
108↔111	106,6↔109,6	ROSEF108-						
118↔121	116,6↔119,6	ROSEF118-						

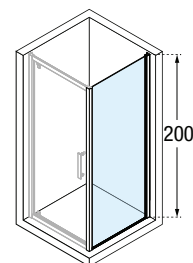

**FOR THE SOLUTION WITH 2 FIXED PANELS ALWAYS
USE 2 SUPPORT CORNER BARS**

Construction of the Code: **Code** + **Glass** + **Profile** = Final product Code

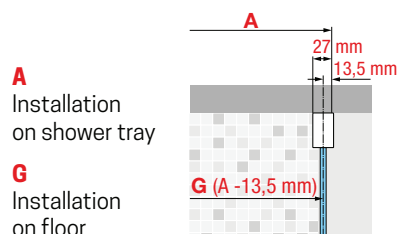

TECHNICAL DATA

PROFILE COLOURS




Silver
code B



Chrome
code K



GLASS TYPE 6 mm (European Standards UNI EN 14428)

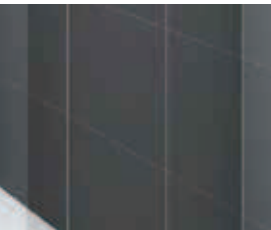

Clear
code 1



Satin
code 4

PRINTING



Rose 1
code 56



Rose 2
code 57

HANDLES



Crystal handle
Interaxis 256 mm



Crystal handle



Chromed metal handle



Chromed metal handle



Chromed metal handle


Code	Price
R40MAROS1-K	

Code	Price
R40MACNF1-K	

Code	Price
R40MANEX1-K	


Code	Price
R40MAGIN1-K	

OVERALL DIMENSIONS FIXING PROFILES

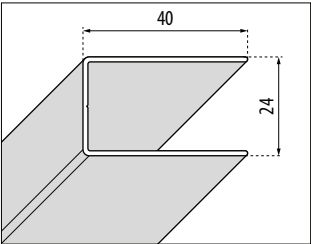


WALL
R - PHB - PH+F - A

Perfis	Code
White	P01BEAST-A
Silver	P01BEAST-B
Chrome	P01BEAST-K

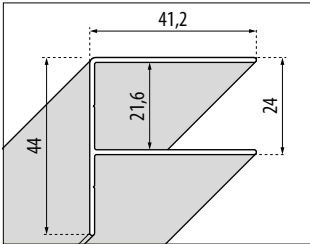


WALL
2A - B - 3P - G - S - 2M - 2P

Perfis	Code
White	P01BEGST-A
Silver	P01BEGST-B
Chrome	P01BEGST-K

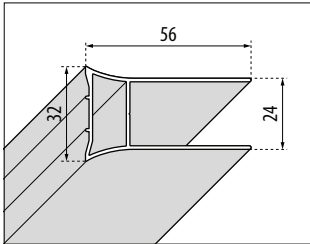

EXTENSION
R - PHB - PH+F - A



Perfis	Code
White	P05ROSST-A
Silver	P05ROSST-B
Chrome	P05ROSST-K

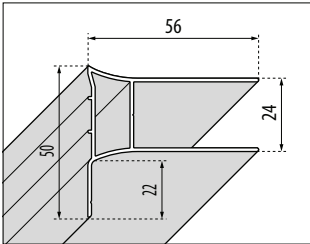


EXTENSION
2A - B - 3P - G - S - 2M - 2P

Perfis	Code
White	P05ROSCST-A
Silver	P05ROSCST-B
Chrome	P05ROSCST-K

HOW TO TAKE THE MEASUREMENTS

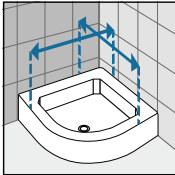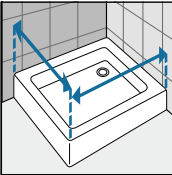

Take the measurements from wall to the external edge of the shower tray. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.

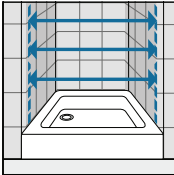

Take the measurements from wall to wall at the bottom, at the top, in the middle and use the smallest. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.