

ZEPHYROS S

FOLDING SHOWER DOOR



195 cm



6 mm



6 cm



GLASS TYPE



Clear
code 1



Niva
code 11



Fumé
code 54



Zephyros 1
code 68

PROFILE COLOURS



White
code A



Silver
code B







Chrome
code K




Matt Black
code H

Dimensions			Code	Glass				Profile			
Actual size	Door projection	Access		1	11	54	68	A	B	K	H
A	B	*		Clear	Niva	Fumé	Zephyros 1 print	White	Silver	Chrome	Matt Black
66↔72	31	47	ZEPHYRS66-								
72↔78	34	53	ZEPHYRS72-								
76↔82	36	57	ZEPHYRS76-								
86↔92	41	67	ZEPHYRS86-								
96↔102	46	77	ZEPHYRS96-								

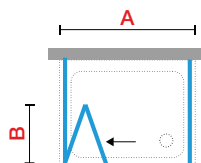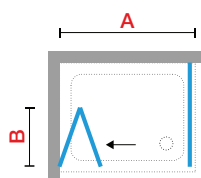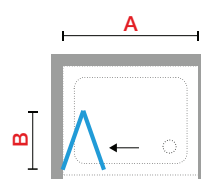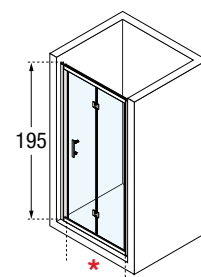

TECHNICAL DATA

PROFILE COLOURS

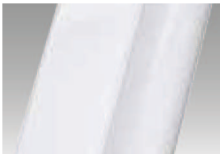

White
code A



Silver
code B



Chrome
code K



Matt Black
code H

GLASS TYPES 6 mm (European Standards UNI EN 14428)



Clear
code 1




Niva
code 11



Fumé
code 54

PRINTING

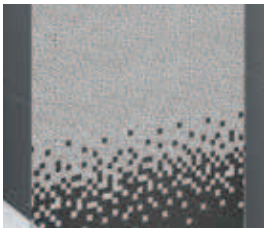


Zephyros 1
code 68

OPTIONAL



	Dimensions	Code	Price
Chrome	15 cm	R80LOU150-K	
	25 cm	R80LOU250-K	
	35 cm	R80LOU350-K	
	45 cm	R80LOU450-K	
Black	25 cm	R80LOU250-H	
	35 cm	R80LOU350-H	
	45 cm	R80LOU450-H	

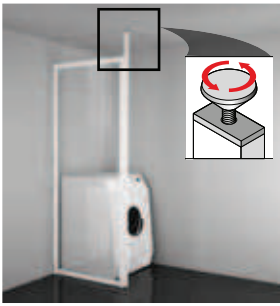


Finishing	Dimensions	Code	Price
White	h 180 ↓ 265	SPA3102	
Silver	h 180 ↓ 265	SPA3102	
Chrome	h 240	SPA31240ST-K	

CEILING PROFILE


Special profile for ceiling fixing to be combined to ZEPHYRF5SP

OVERALL DIMENSIONS FIXING PROFILES

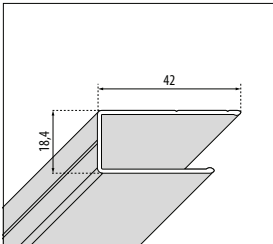


WALL
A - R - F

Profile	Code
White	P01BHRAS-T-A
Silver	P01BHRAS-T-B
Chrome	P01BHRAS-T-K
Black	P01BHRAS-T-H

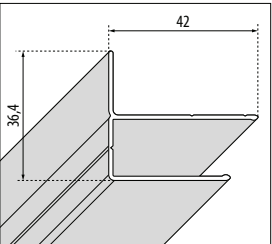


WALL
2P - G - B - S - S2 - 3P - 2A

Profile	Code
White	P01BHMOST-A
Silver	P01BHMOST-B
Chrome	P01BHMOST-K
Black	P01BHMOST-H

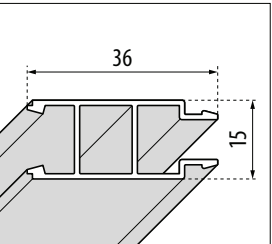


EXTENSION
all model

Profile	Code
White	P05HAAS-T3-A
Silver	P05HAAS-T3-B
Chrome	P05HAAS-T3-K
Black	P05HAAS-T3-H

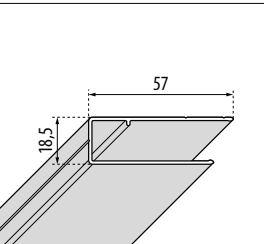

EXTENSION
A - R - F



Profile	Code
White	P05BHST-A
Silver	P05BHST-B
Chrome	P05BHST-K
Black	P05BHST-H

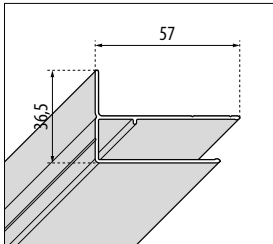


EXTENSION
2P - G - B - S - S2 - 3P - 2A

Profile	Code
White	P05BHCST-A
Silver	P05BHCST-B
Chrome	P05BHCST-K
Black	P05BHCST-H

HOW TO TAKE THE MEASUREMENTS

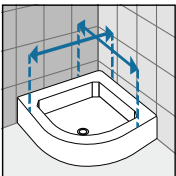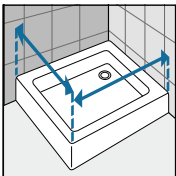

Take the measurements from wall to the external edge of the shower tray. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.

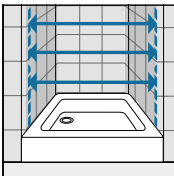

Take the measurements from wall to wall at the bottom, at the top, in the middle and use the smallest. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.